

aperature ring

focus ring

body

lens

rewind
crank
(lift to open
back cover)

viewfinder

film
speed
dial

film speed
window


shutter
speed
dial

shutter release
button

frame
counter

film
advance
lever

back
cover

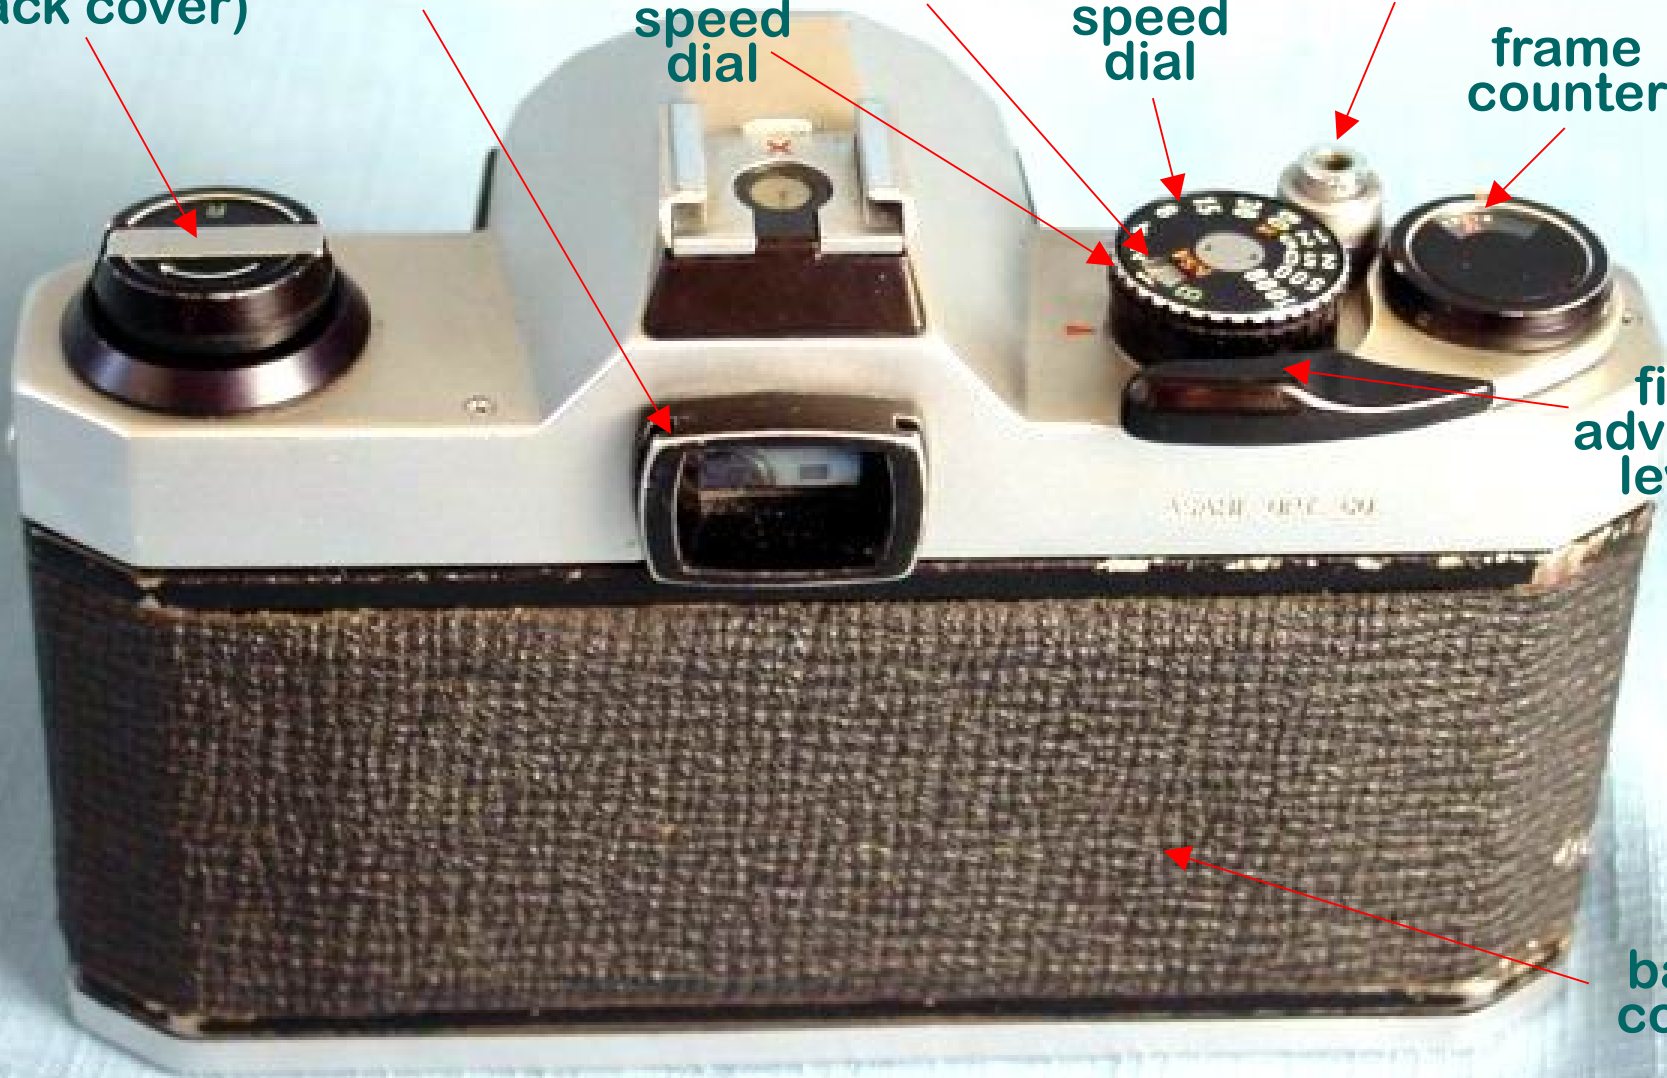



K1000

“clutch”
rewind
release

tripod
mount

battery
cover

BATTERY
N3350

F-Stops

F-2	Hallways
F-2.8	Commons
F-4	Sunny rooms
F-5.6	Cloudy skies
F-8	Overcast
F-11	Sunny days
F-16	Bright Sunshine

Film Speeds

25	Bright sun
64	Slide films
100	Outdoor
125	Outdoor
200	Indoor/outdoor
400	Indoor
800	Low light
1600	Very low light
3200	Little light

Shutter Speeds

B

1

2

4

8

25

30

60

125

200

125

250

500

1000